



Yun Yang Fire Safety Equipment Co.,Ltd.

YFR-AI

R-Type Fire Alarm Control Panel

Operation Manual

2024-09-02 REV-1

71114-R03-AI-E

Yun Yang Fire Safety Equipment

TEL : +886 7355 1234

FAX : +886 7355 0022

http : //www.yun-yang.com.tw


Email : tyy.intl@yun-yang.com.tw

CONTENTS

Control Panel Description	3
A. Name and Function of Main Panel Sections	3
B. Name and Function of Status Indicators	4~5
C. Name and Function of Function Control Switches ...	5~6
Screen Description	7
1. Normal Standby Screen	7
2. Function Menu Screen	7
A. Real Signal.....	7
(1).Fire	8~9
(2).Gas	9
(3).System.....	10
(4).Equipment.....	10
(5).Isolation	11
B. Panel settings	12
(1).Time.....	13
(2).Password.....	13
(3). Device settings.....	14
(4). Clear History.....	14
(5). Linkedtable	15

(6). Loop Test	16-18
(7). Sys init	19
(8). Backup	19
(9). Sensitivity setting.....	20
C. Address Table	22
D. History Record.....	24
E. Equipment Error.....	24
F. System Error Record	25
G. Appearance, Dimensions, and Specifications.....	25~26
H. Maintenance Essentials	27~28
I. EZ Troubleshooting	29
J. Installation Cautions.....	30
K. External Wiring Diagram (Main Panel).....	31~32
L. Structure Block Diagram.....	33


Control Panel Description :

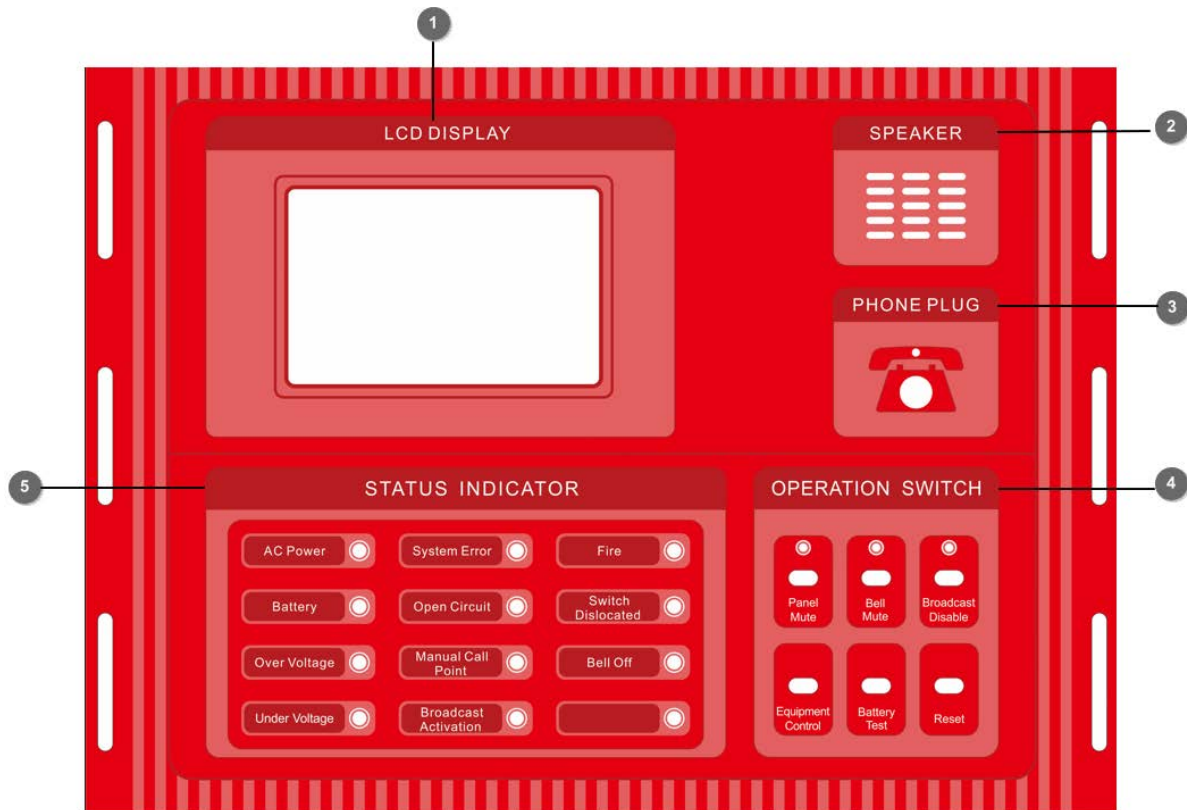

A. Name and Function of Main Panel Sections

1. **Touch Operation Display:** Displays detailed information regarding the location of fire, natural gas leak, and other alarms. This operation screen can be used to process alarms.
2. **Audio Device:** Sounds the panel alarm and sound guidance.
3. **Local Phone:** Contacts and enables conversation with the main panel after the receiver has been plugged into the on-site operation panel.
4. **Function operation:** Toggles operations (ON/OFF) in different categories including Alarm Process, Device Relay, Function Control, and Add-On Function.
5. **Status Display:** Displays the main indicator lights for the current status of the panel.


B. Name and Function of Status Indicators

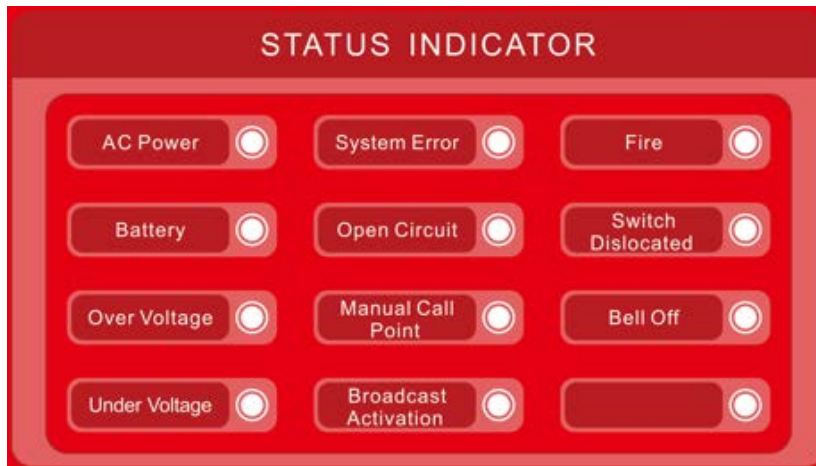

1. **AC Power:** The indicator light is lit when AC power is used.
2. **Battery:** The indicator light is lit when the standby power is tested under AC power. The light remains lit when the standby power is used.
3. **Over Voltage:** The indicator light is lit when the system voltage is over 28V.
4. **Under Voltage:** The indicator light is lit when the system voltage is under 22V.
5. **System Error:** The indicator light flashes when an abnormal message is received.
6. **Open circuit:** The indicator light flashes when the addressable device loop (L, C) is off-line.
7. **Manual Call Point:** The indicator light is lit when the fire alarm signal button is pressed. Fire alarm is immediately activated on the loop.
8. **Broadcast Activation:** The indicator light flashes when the broadcasting starts and the alarm bell is temporarily stop.

9. **Fire Indicator:** The indicator light flashes in the event of fire.
10. **Switch Dislocated :** The indicator light flashes when the control switch of the panel or the touch operation display is not positioned normally.
11. **Bell off:** When the indicator light is lit when the alarm is permanently stopped.

C. Name and Function of Function Control Switches

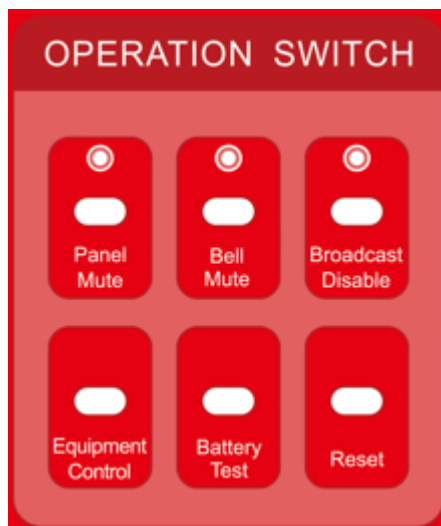

1. **Panel Mute:** Flashes when pressed to turn off the main audio. Remains lit for an extended period of time when long pressed to turn off subsequent soundings.
2. **Bell Mute** (Beep again later):
 - (1) Flashes when pressed to stop the alarm bell temporarily.
 - (2) If there is no new alarm, the flash light will be turned-off and the area bells are returned to the normal condition.
 - (3) If there is new alarm, the flash light will be turned-off immediately and the area bells are returned to the normal condition.
3. **Broadcast Disable:** Flashes when pressed to turn off the

broadcast relay function.

4. **Equipment Control:** After pressing, each linkage switch can be displayed on the "touch operation screen", providing a function window for stop selection.
5. **Battery Test:** Press to view the voltage of the backup battery.
6. **Reset:** Press to restore the main panel and all repeaters to the default setting.

Screen Description:

1. Normal Standby Screen



2. Function Menu Screen


A. Real Signal




R-Type Fire Alarm Control Panel

(1) Fire: Display the current fire alarm message.

a. Fire alarm activating message

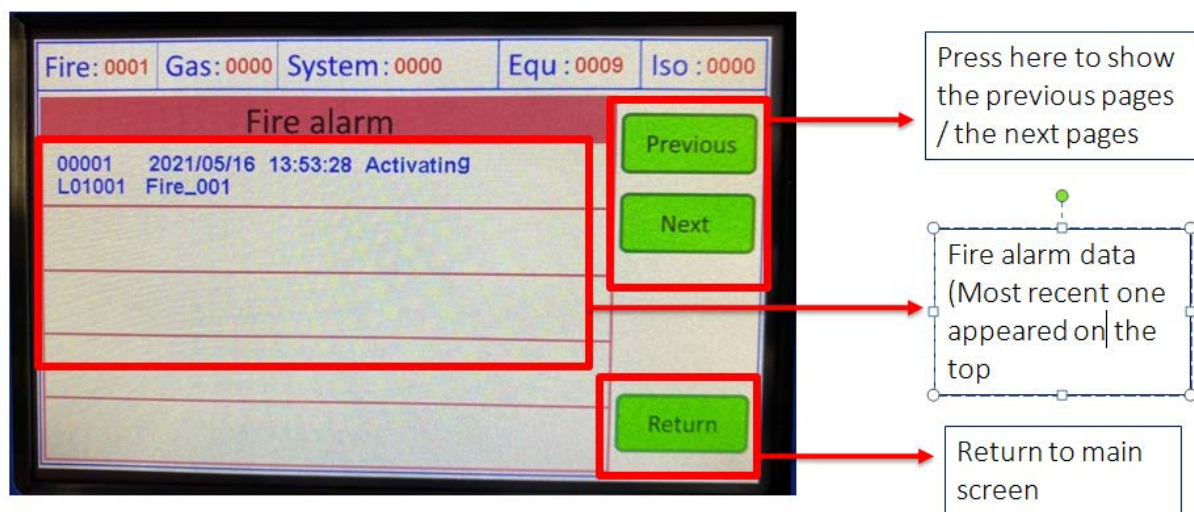

b. Maintain / Pre alarm message(Display maintain/pre alarm value: only for Analogue detector)

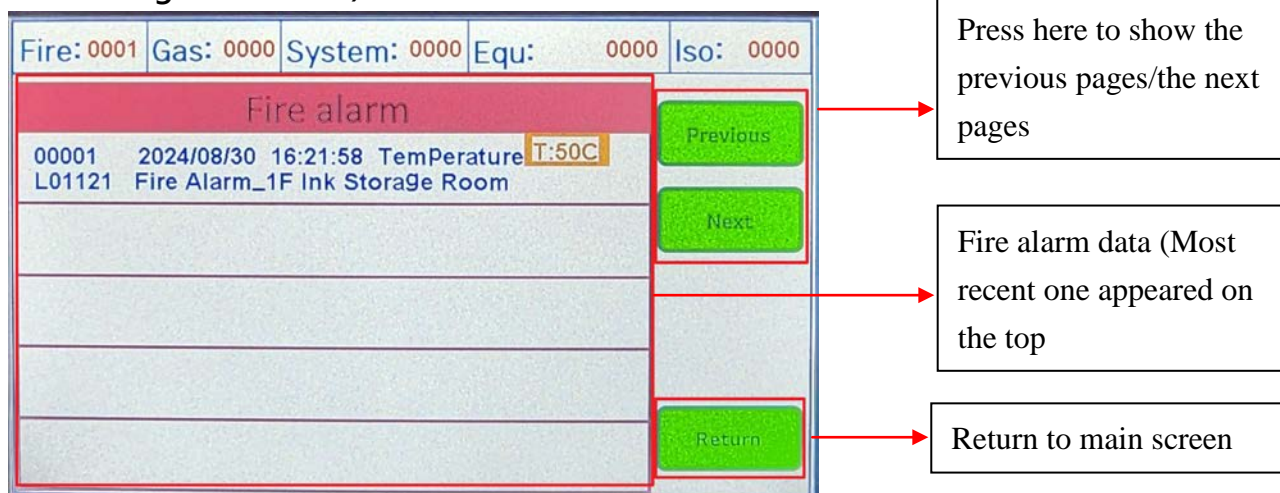

R-Type Fire Alarm Control Panel

c. Fire alarm activating message (Display alarm value: only for Analogue detector)

Fire: 0001 Gas: 0000 System: 0000 Equ: 0000 Iso: 0000

Fire alarm

00001 2024/08/30 16:22:22 TemPerature T:55C e
L01121 Fire Alarm_1F Ink Storage Room

Previous

Next

Return

Press here to show the previous pages/the next pages

Fire alarm data (Most recent one appeared on the top)

Return to main screen

(2) Gas: Display the current gas alarm message.

Fire: 0000 Gas: 0000 System: 0001 Equ: 0000 Iso: 0000

Gas alarm

Previous


Next

Return


Press here to show the previous pages / the next pages

Return to main screen



(3)System: Display the current system error message.

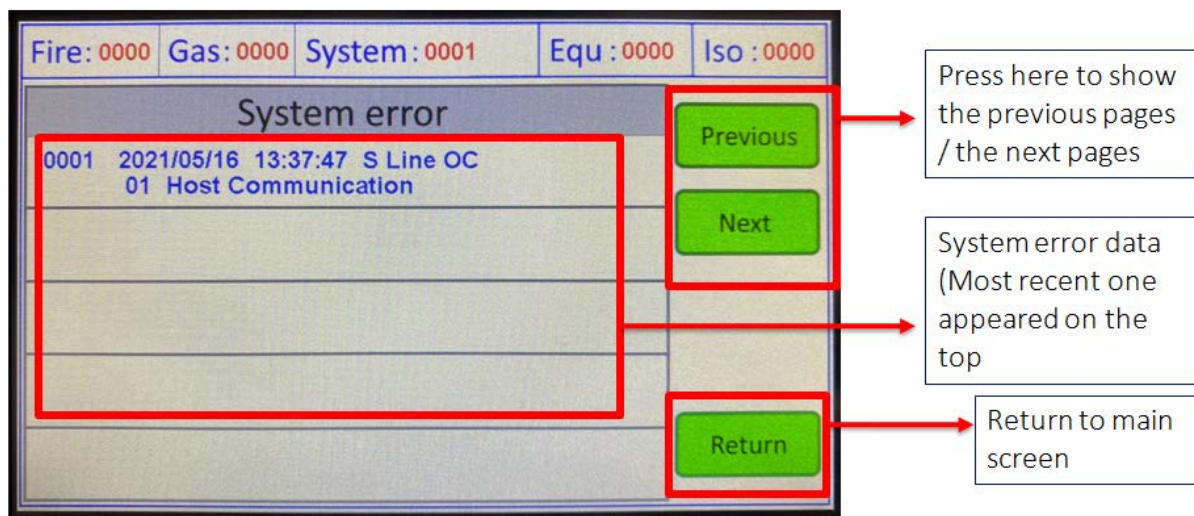


(4)Equipment: Display the current equipment error message

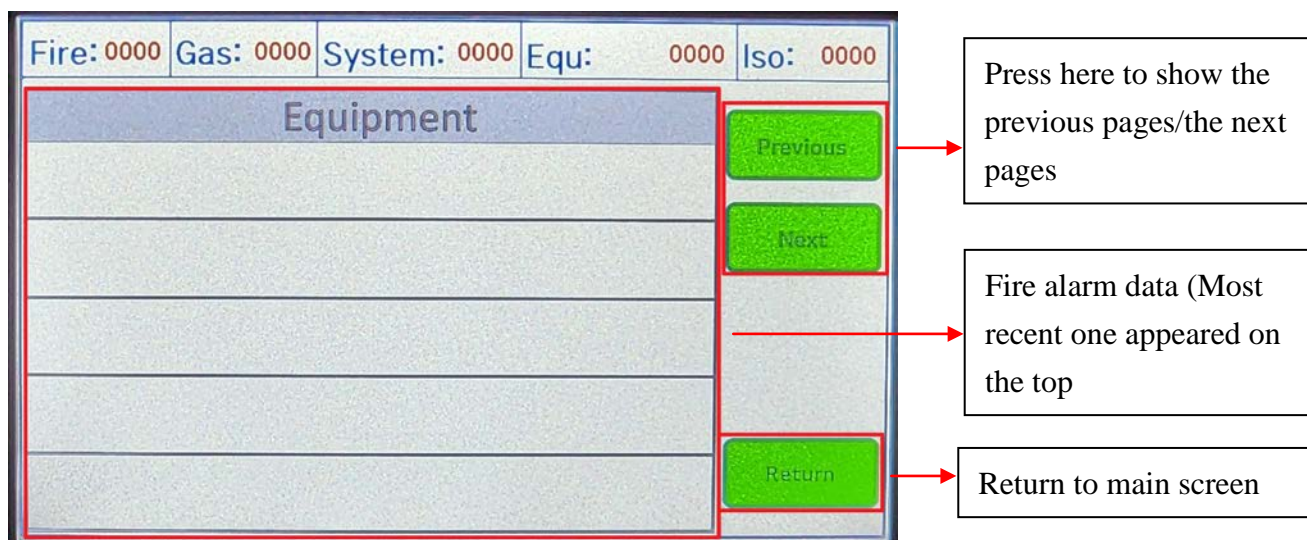


(5) **Isolation:** Display the current isolation message and loop isolation settings, need to enter a password before operating.

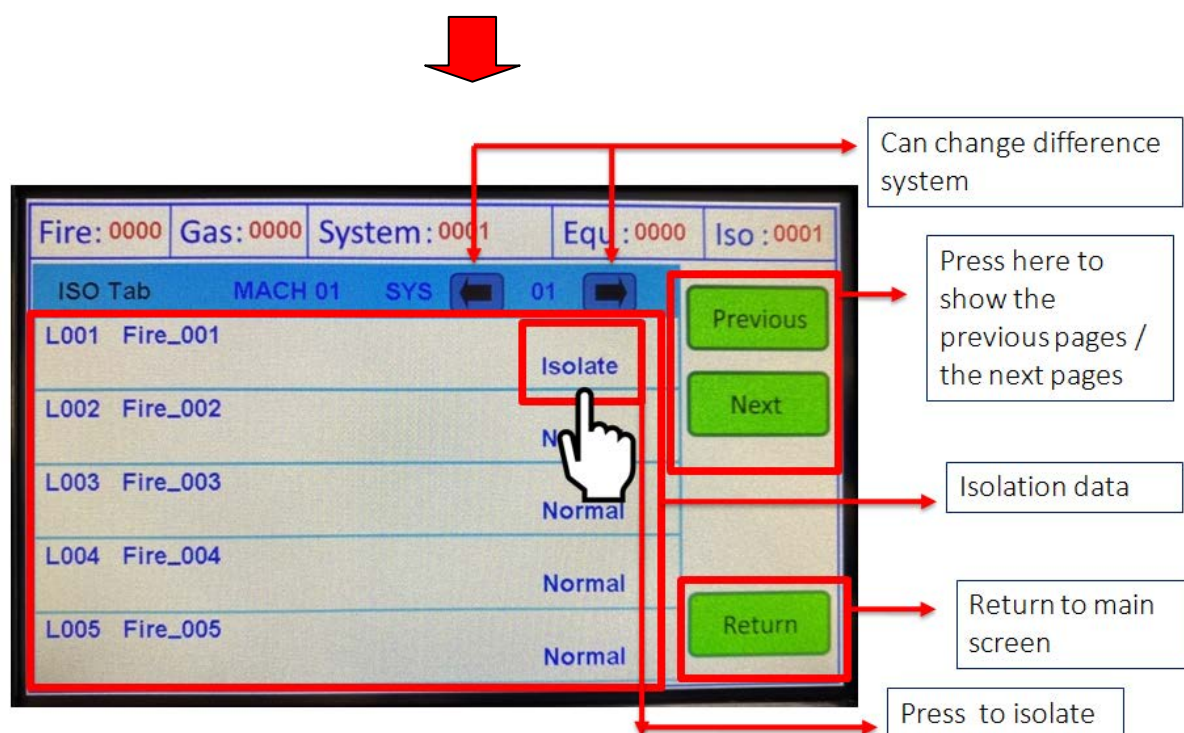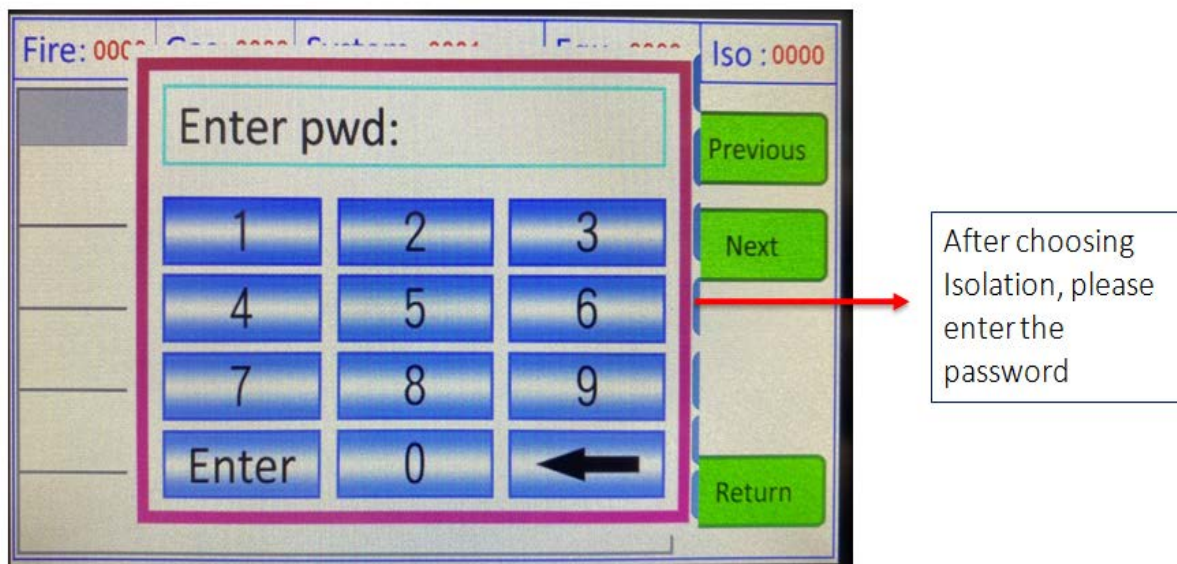


B. Panel Settings: In this window there are options to setup the panel and others. Please input the correct password.

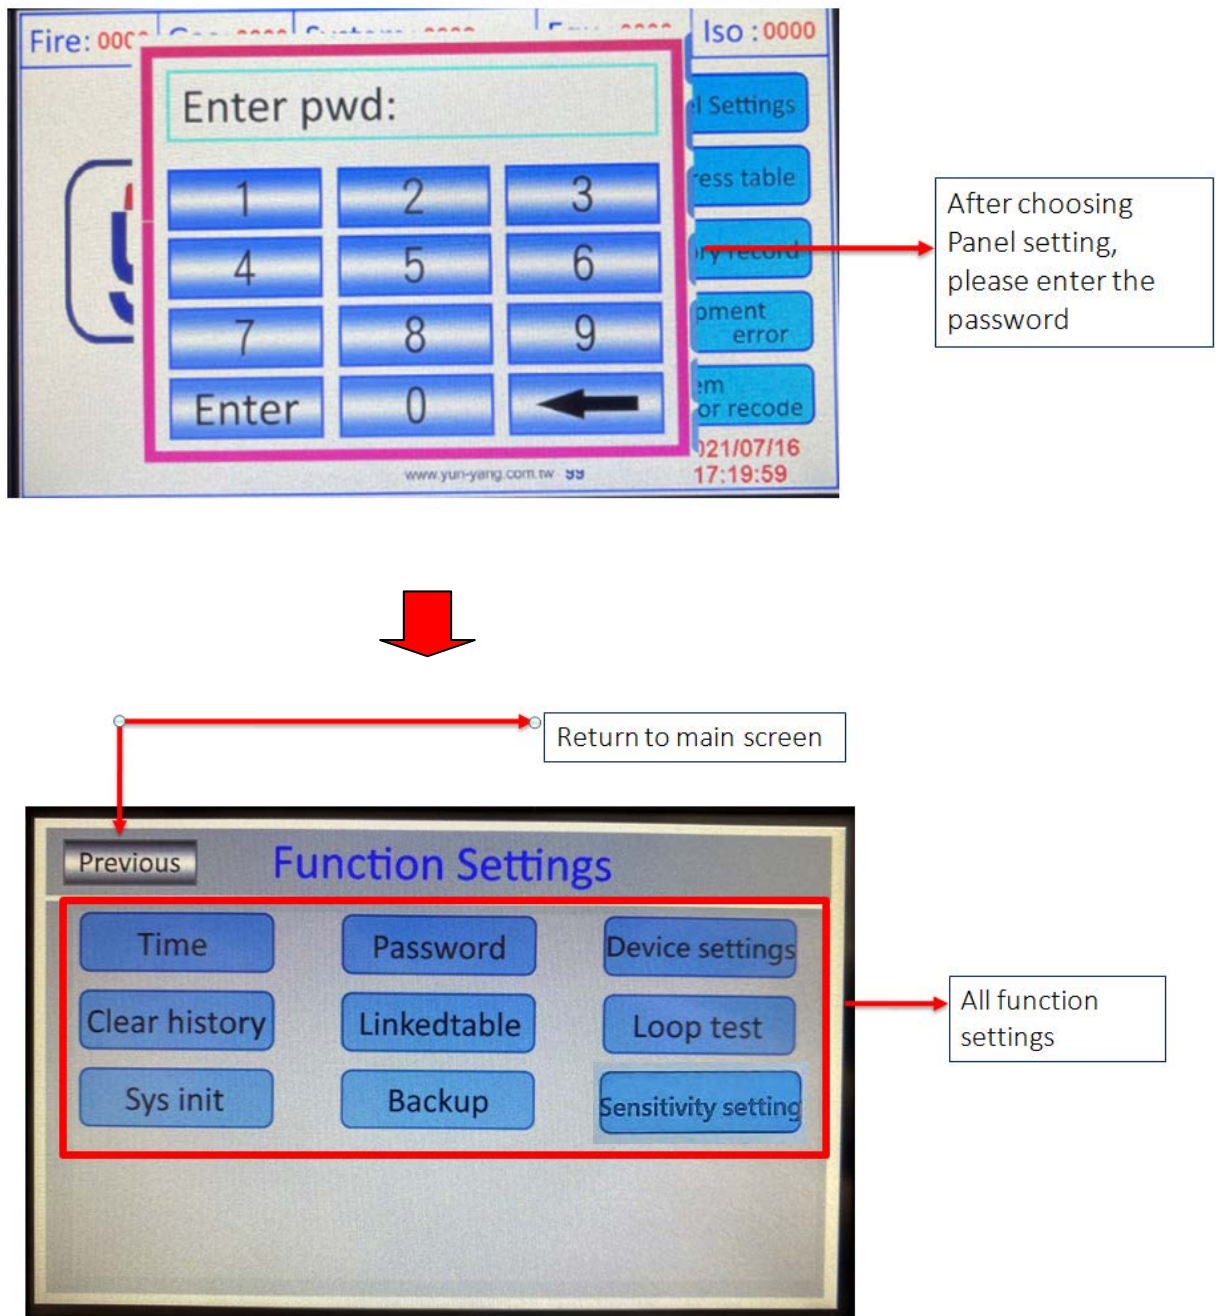


(1) Time: Can be used to set the time of this panel and all connected devices.

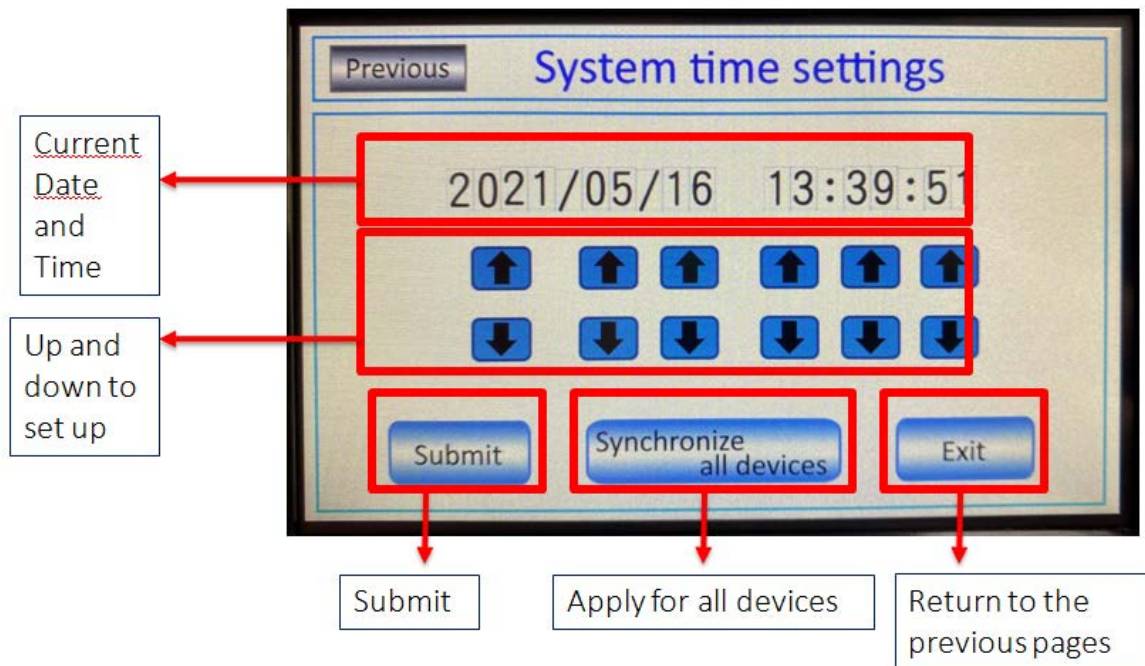


(2) Password: The password can be changed here.

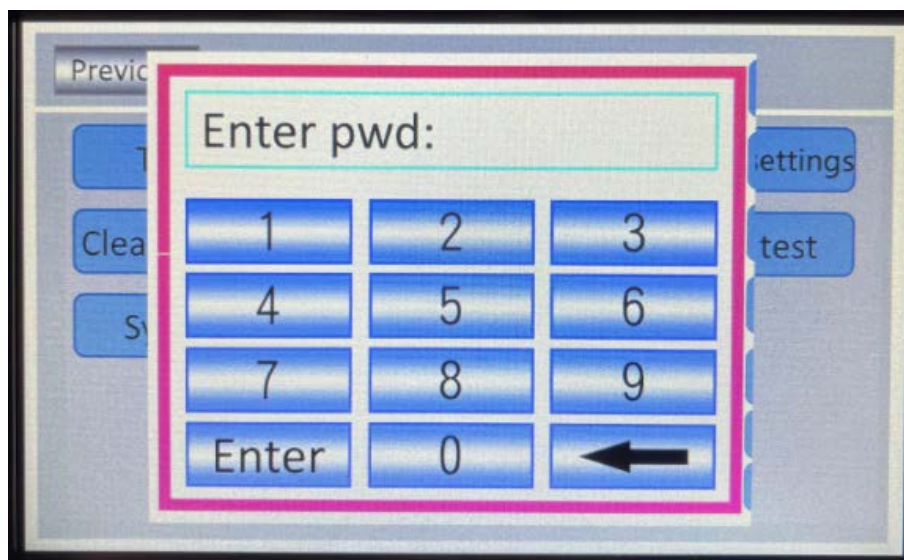


(3) Device Settings : Set-up the number of Addressable Fire Alarm Control Panel and Annunciator.

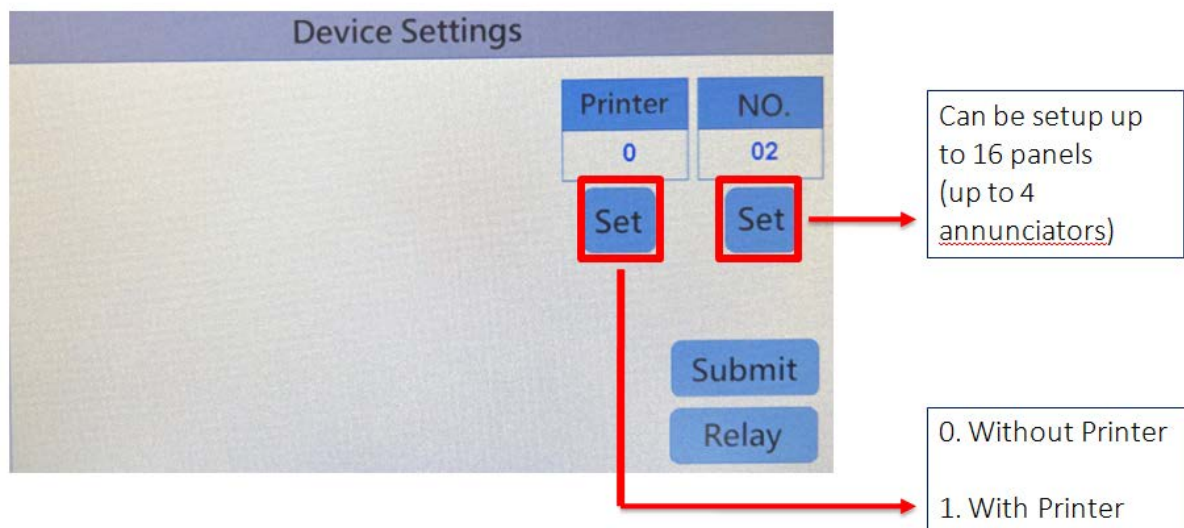

(4) Clear history: All history records can be deleted.



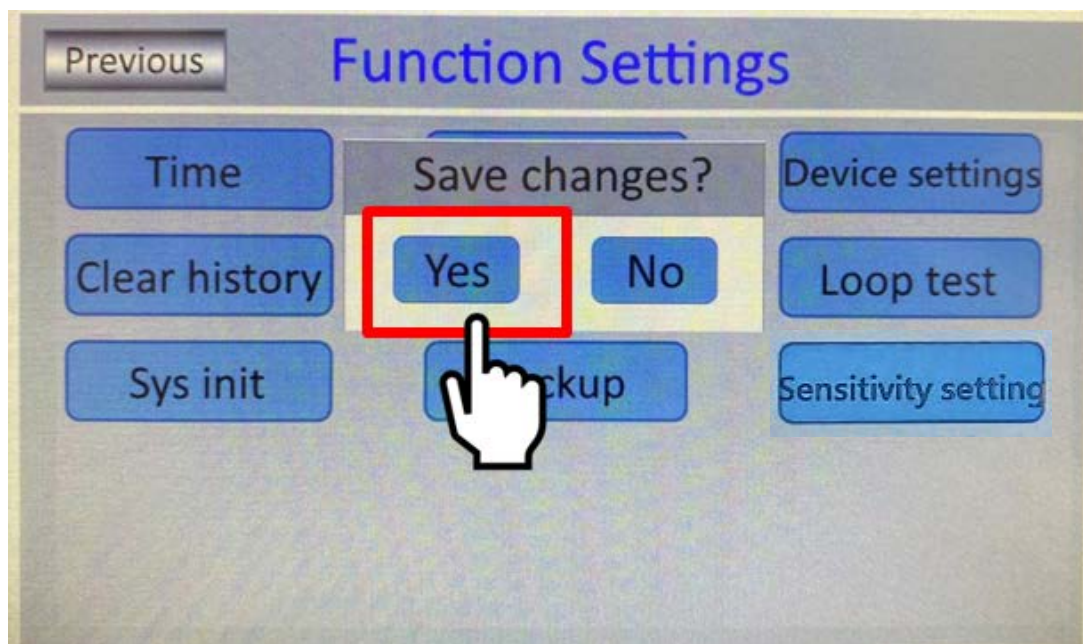


- (5) **Linketable**: Insert the SD card with the linked table data first.


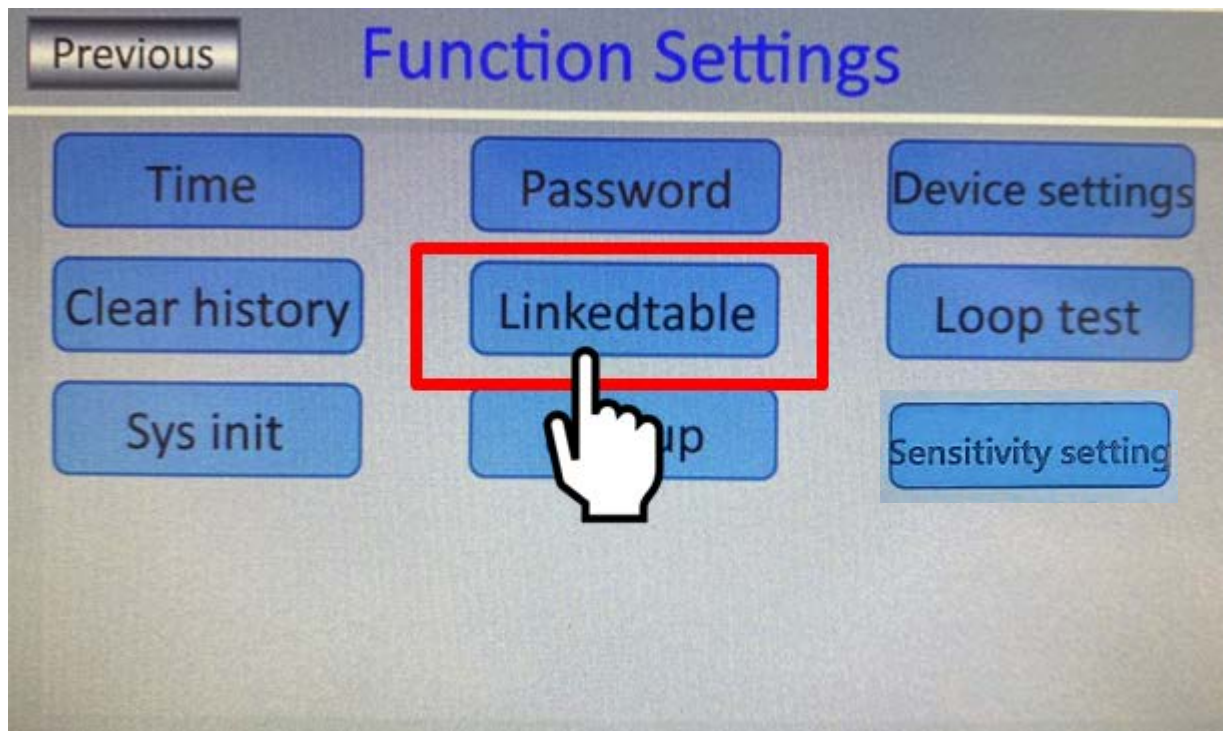


(6) Loop test: The working test and disconnection test.

Working test:

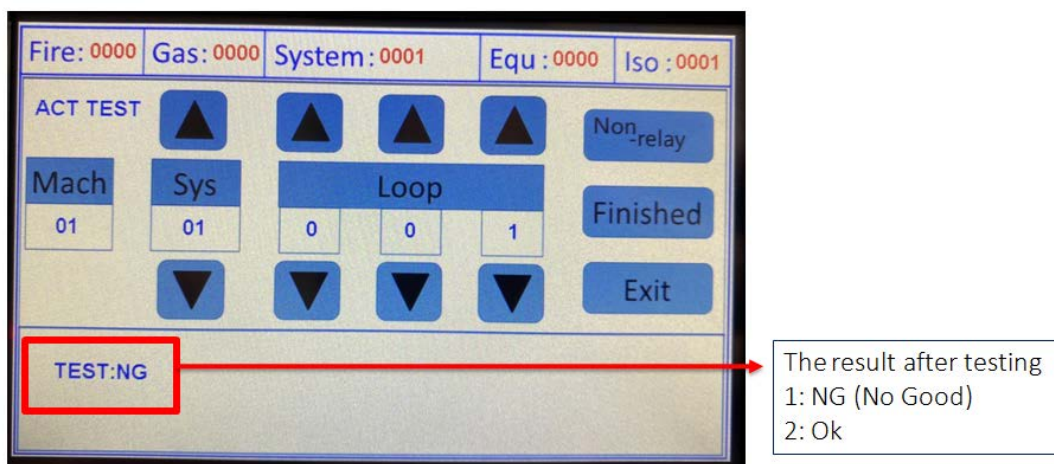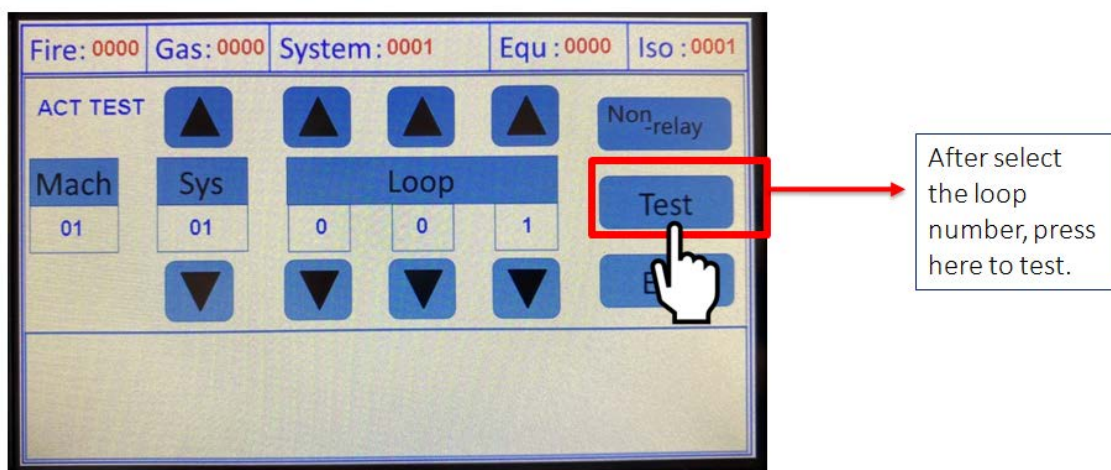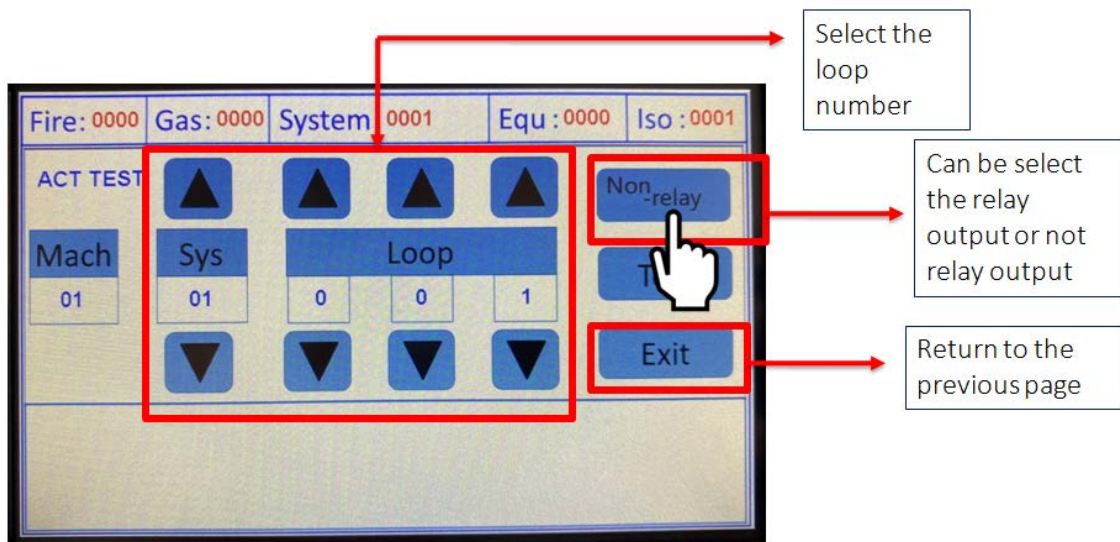


Disconnection test:

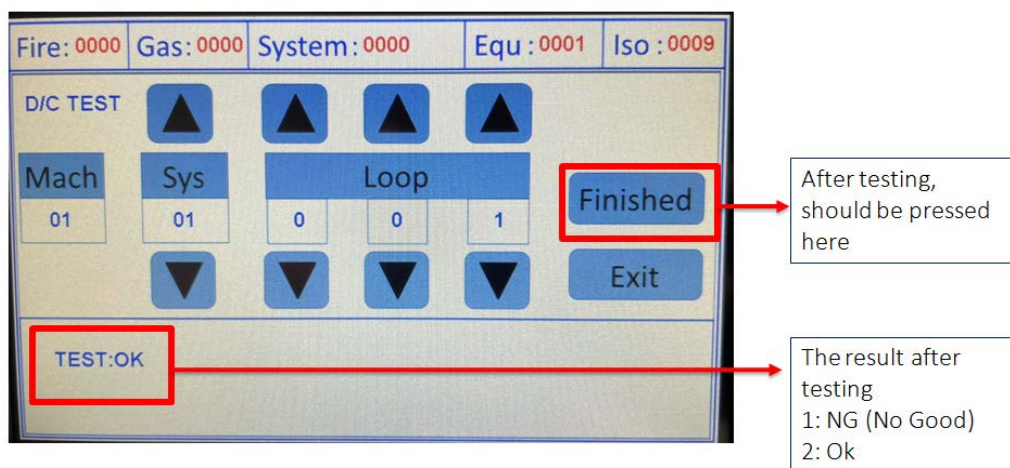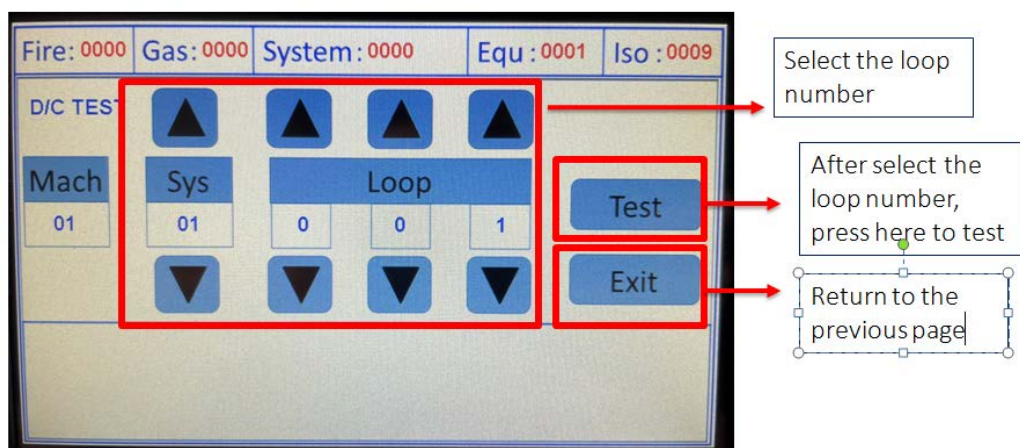


R-Type Fire Alarm Control Panel

Pre-Alarm Test:

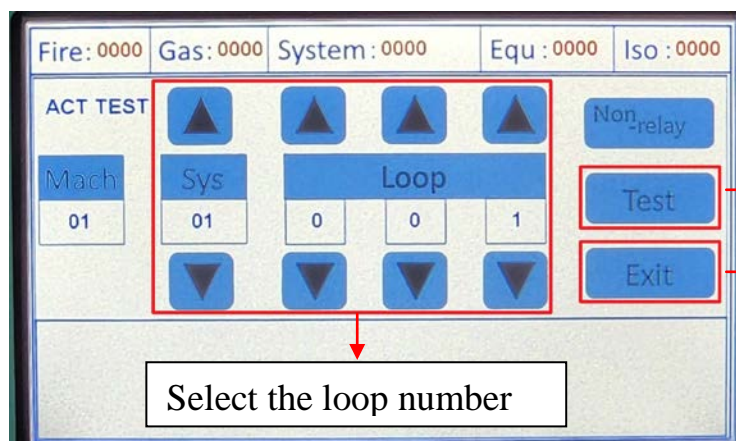


After select the loop number, press here to test

Return to the previous page

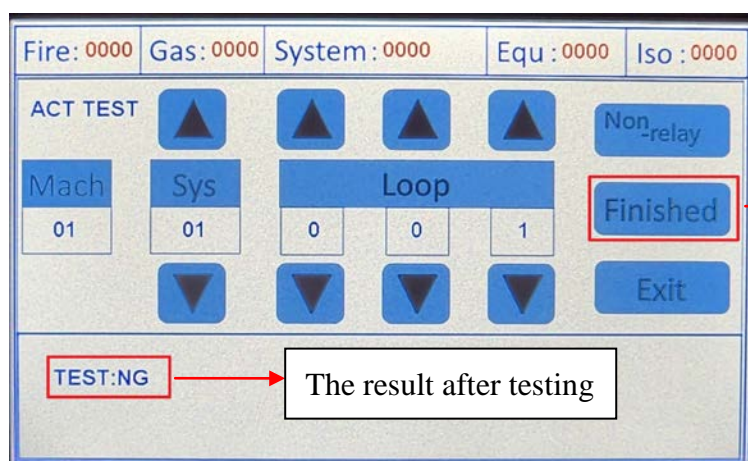


After testing should be pressed here


(7) **Sys init** : System initialization.

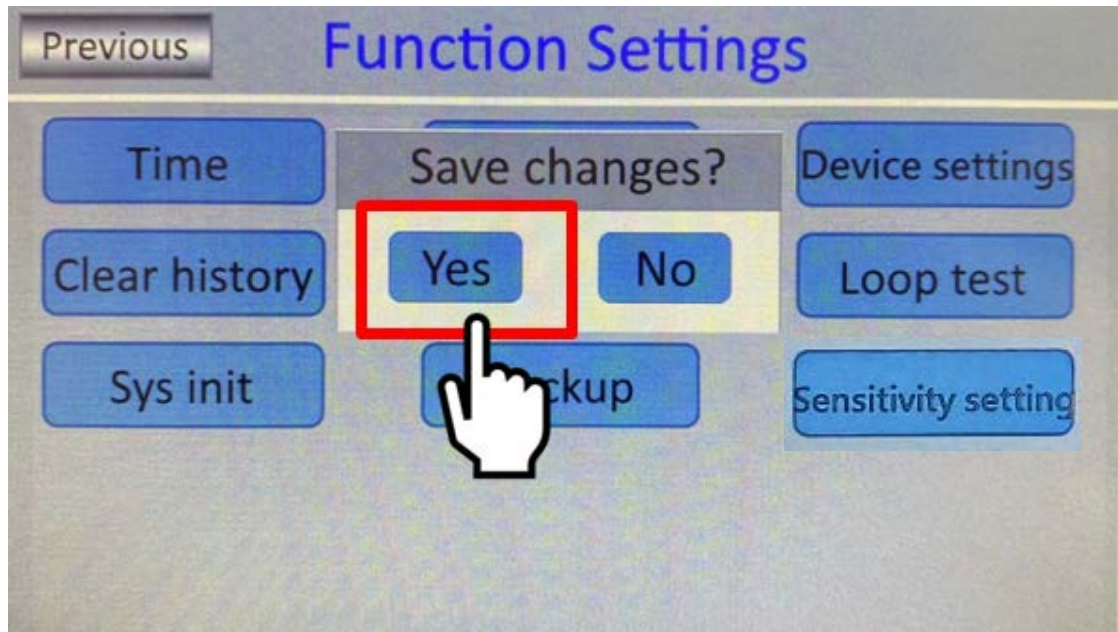


(8) **Backup** : Insert the pre-backup SD card and press here to automatically backup.

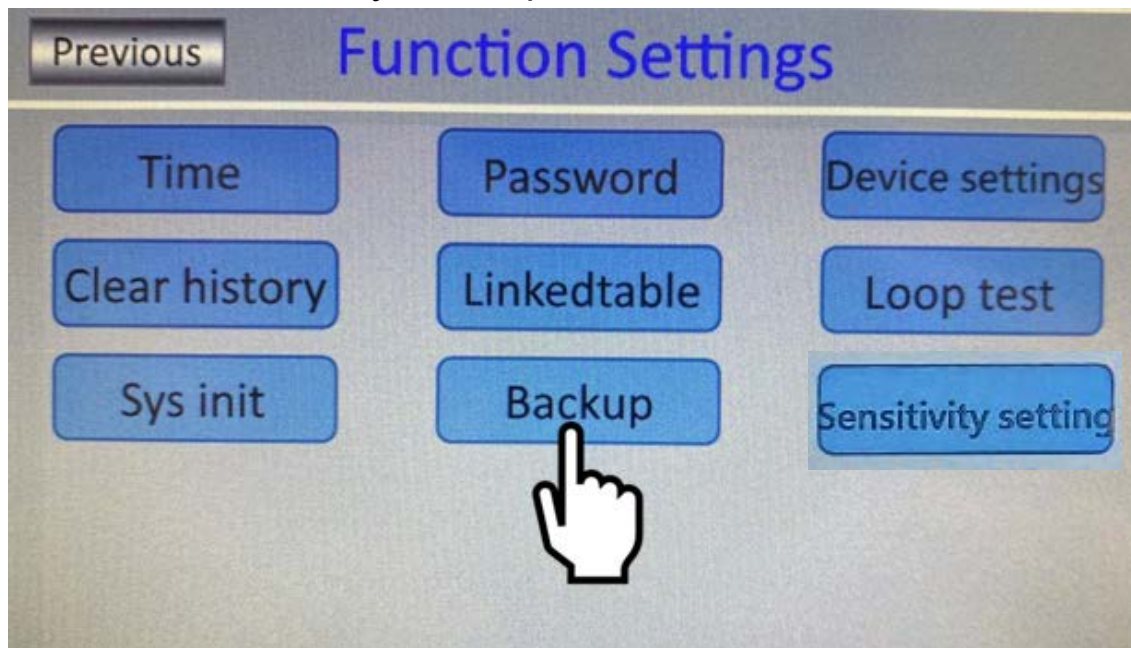


(9)Sensitivity setting:

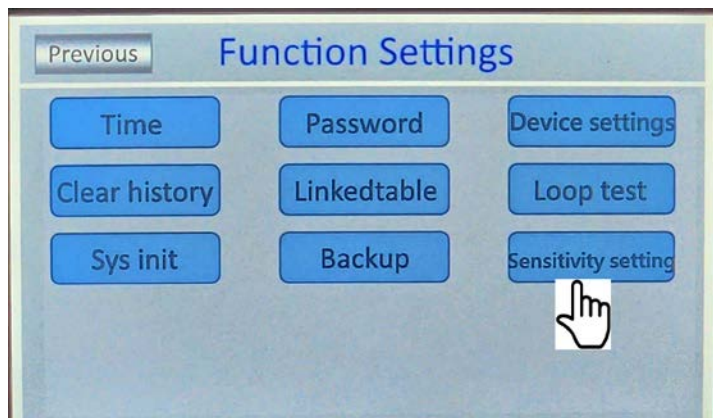

(a)Select the system and loop number

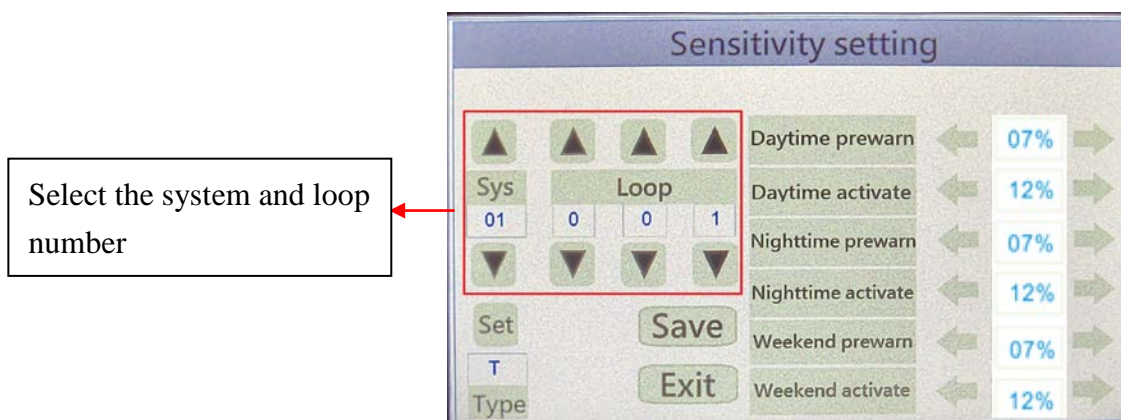

(b)Switch the smoke (S) or heat (T) detector

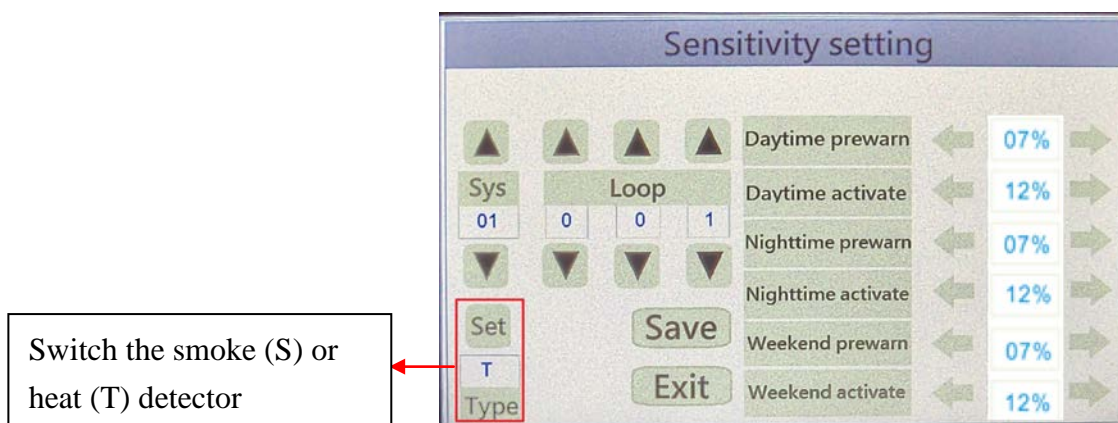

(c) Sensitivity value setting

Sensitivity setting

Sys	Loop	Daytime prewarn	Daytime activate	Nighttime prewarn	Nighttime activate	Weekend prewarn	Weekend activate
01	0 0 1	07%	12%	07%	12%	07%	12%

Set Save Exit

T Type

Sensitivity value setting

C. Address table: The data of the addresses are appeared here.

Can switch the system number

Show all address data

Show the current smoke concentration "S" and temperature value of the "T" detector


Press here to show the previous pages/the next pages

Return to the previous page


Address	MACH 01	SYS	01
L116	Fire Alarm_A Building 9 1F Elevator		
L117	Fire Alarm_1F Electrical Room		
L118	Fire Alarm_1F Paint Storage Room	S: 0	
L119	Fire Alarm_1F Oil Drum Storage Room	S: 4	
L120	Fire Alarm_1F Toluene Storage Room	S: 0	
L121	Fire Alarm_1F Ink Storage Room	T: 50	

R-Type Fire Alarm Control Panel


Status overview:

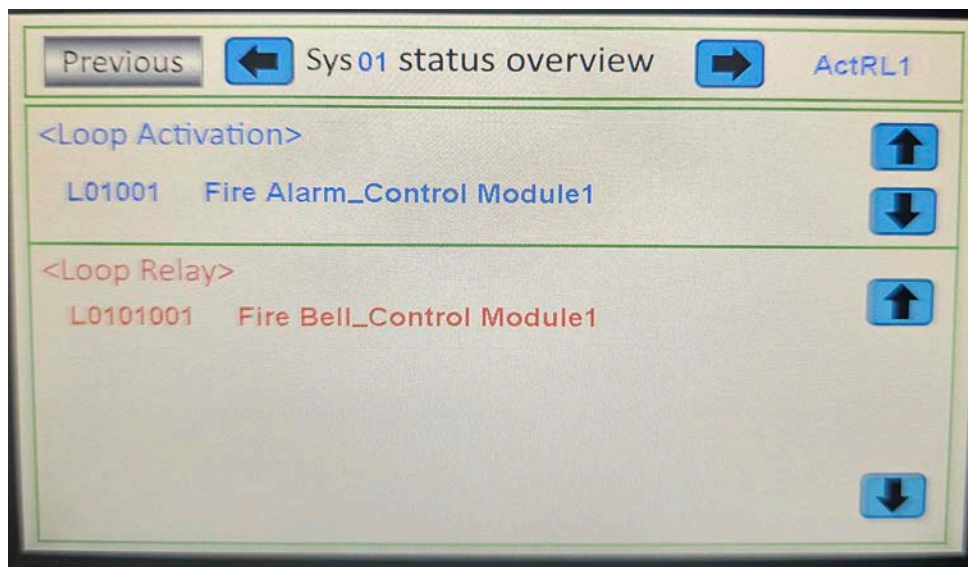


Status overview:

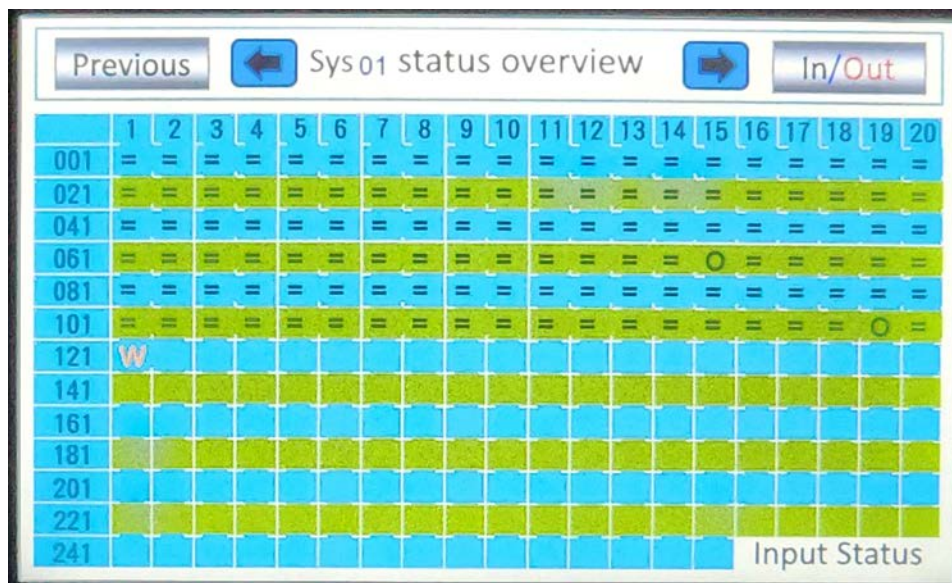


D. History record: The history data of all fire alarms are appeared here.

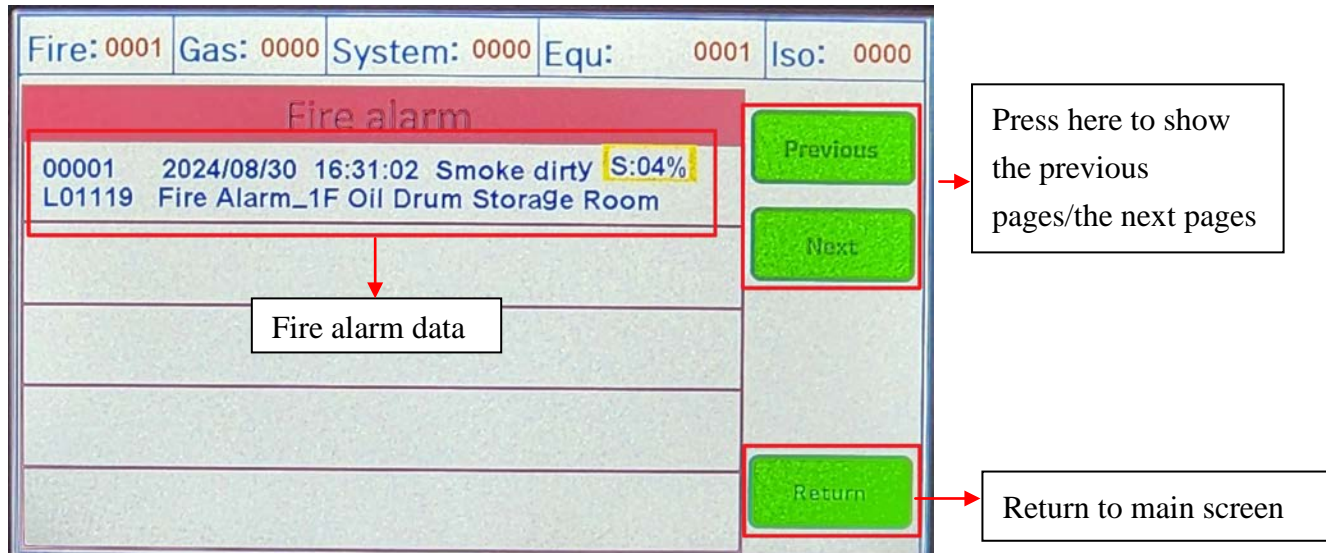

E. Equipment error: The history of equipment errors are appeared here.

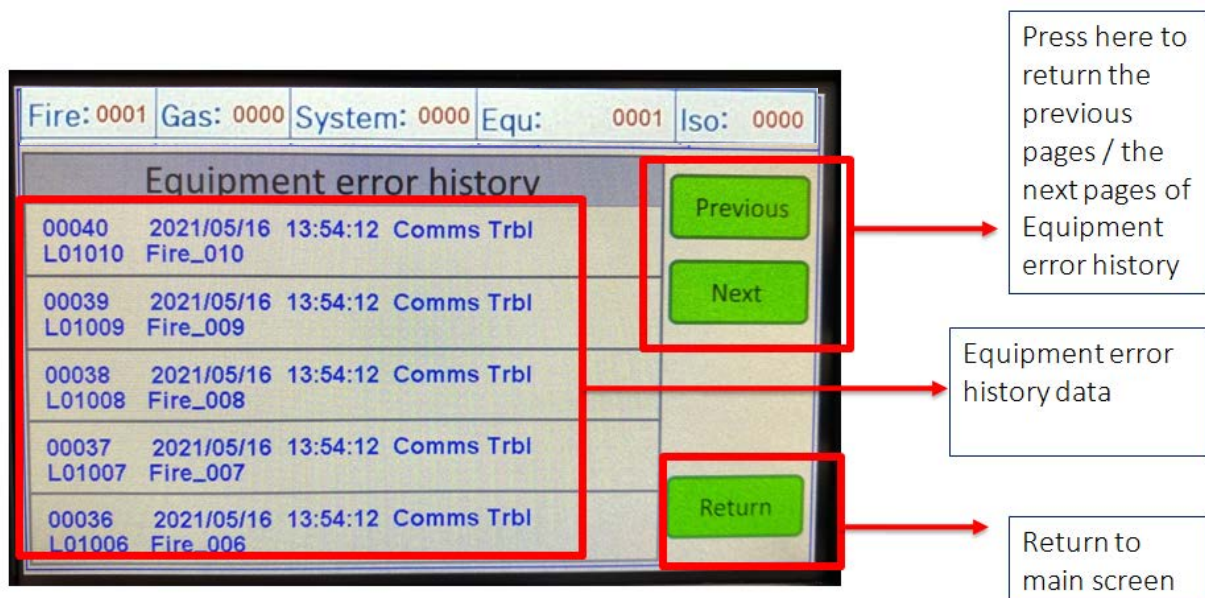

F. System error record: The history of system errors are appeared here.

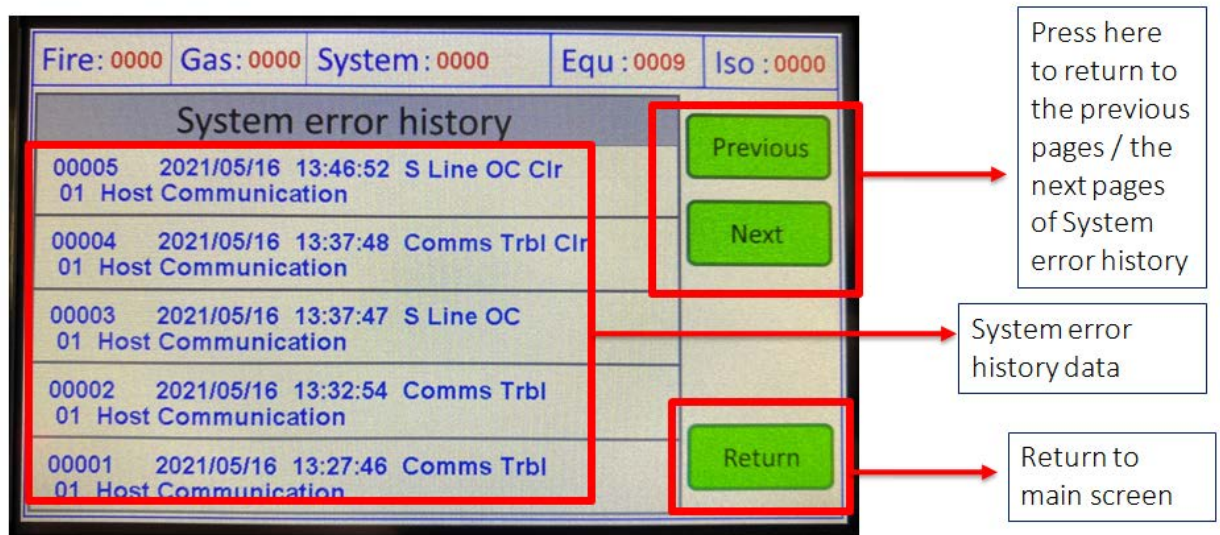

G. Appearance, Dimensions, and Specifications

Dimensions of the exterior iron cabinet

Casing Type	Mounting							
Addresses	256/1CH	512/2CH	768/3CH	1024/4CH	1280/5CH	1536/6CH	1792/7CH	2048/8CH
Height(mm)	495	450	450	870				
Width(mm)	300	480	480	560				
Depth(mm)	120	160	160	200				
Casing Type	Mounting				Standing			
Addresses	2304/9CH	2560/10CH	2816/11CH	3072/12CH	3328/13CH	3584/14CH	3840/15CH	4096/16CH
Height(mm)	1500							
Width(mm)	560							
Depth(mm)	260/360							

Note: The above table is the standard size; it can be adjusted and customized according to the project space.

R-Type Fire Alarm Control Panel

Specification Table

Item	Specification							
Main Power Supply	AC110V 60Hz · AC220V 60Hz							
No. of Addresses / No. of Units	256/1CH	512/2CH	768/3CH	1024/4CH	1280/5CH	1536/6CH	1792/7CH	2048/8CH
	2304/9CH	2560/10CH	2816/11CH	3072/12CH	3328/13CH	3584/14CH	3840/15CH	4096/16CH
Standby Battery	DC24V							
Loop Voltage	Load Power/ Indicator Light/ Zone Telephone: DC24V SLC Power Source: AC32V							
Power Consumption	Main Control Panel Monitoring (Max): 530mA Communication Module (Each System) Monitoring (Max): 380mA							
Transmission Method	Selective / Sequential							
Broadcast Output Method	Relay Output: Interlock Relay Board x 26 Sets for a Maximum of 4080 Contacts (Relay Board = 40 Contacts (Standard), 160 Contacts (Expansion))							
Main Audio	Synthesized Sound, Human Voice, or Alarm Sound (over 90 dB)							
Temperature Range	0~40°C							
Cabinet Material	Powder Coating Steel							

H. Maintenance Essentials

1. When the control panel is in standby monitoring mode: AC power indicator light is lit, voltage monitor reads DC24V (within the green operating range), backlight power-saving function of the LCD is on, no indicator lights are lit, and the external operation panel light is lit.
2. In the event of power outage, the main panel automatically switches to standby power (battery). AC power indicator light is off and the standby power indicator light is lit. All other parameters are identical with that during AC power monitoring (indicator light is off and flashes when a fire alarm is activated).
3. At least two annual maintenances are suggested every year to ensure the proper functioning of the devices.
4. Please promptly service and repair devices when malfunctioning is noted or when the outer equipment becomes damaged to avoid compromising normal operations or resulting in subsequent damages.
5. Please contract professional organization(s) or relevant qualified maintenance personnel to test the devices. Tests should be recorded and reported to relevant authorities for reference to guarantee the safety of the public. The below test items are for reference:
 - ①Power: Whether the switch between AC power and standby power is normal and whether the standby battery charges normally.
 - ②Fire alarm/disconnection test:

Under normal operation, the panel automatically detects the main panel. When abnormality is detected, please promptly inspect and repair the device(s).

Exterior loop test should be conducted using the actual loop line on-site to ensure that monitoring is normal at each loop point.

- ③ Inspect whether the indicator lights and display are normal on the operation panel.
 - ④ Inspect whether the switch, visual, and audio indicators on the operation panel are normal.
 - ⑤ Reference history record listings to keep track of abnormalities.
 - ⑥ Test exterior relay devices.
6. Maintain the surrounding environment of devices and avoid locations with high humidity, high temperature, or unstable power or voltage (excessive voltage) to guarantee the working life of the electronic parts.
7. Maintain the cleanliness of the LCD window at all times.

I. EZ Troubleshooting

1. Power indicator light is off:

① AC power indicator is off:

Check whether AC power is supplying power normally, whether the AC power switch is turned to (ON) on the main power board, or whether the AC fuse on the main power board is burnt out.

② Standby power indicator is off:

Check whether standby power switch is turned on (ON) on the main power board, whether the power fuse is burnt out, and whether the standby power (battery) is charged.

2. Disconnection/Fire is displayed on the LCD:

Please first check the corresponding external locator (repeater) and then inspect the end of line detector and the corresponding wiring.

3. Switch dislocation indicator is flashing:


Press the ON/OFF switch again to restore the specific output function.

4. System Error: Check the LCD communication history and proceed on-site to check whether the communication wiring has been damaged or whether the locator (repeater) has loosened or fallen off. If definite cause cannot be determined after inspection, please contact the distributor or the manufacturer.

J. Installation Cautions


1. Please make sure that the exterior wires correspond to the labeled contents prior to installation. Ground resistance must be greater than $2M\Omega$.
2. Please make sure that the voltage is normal prior to turning on AC power.
3. Please turn off the battery power when loading or unloading the battery. Confirm the polarity and install the battery correctly into the battery terminal.
4. Make sure that the device is grounded.
5. During test, after the AC power switch is turned off (OFF), please also turn off the standby power to prevent excessive power discharge of the standby battery which may result in lack of power during the next test (need to await recharge).
6. Exterior load capacity limit (each):
 - ① Indicator light (LED): 20mA
 - ② Local alarm: 30mA
 - ③ Sounder: 0.5A
 - ④ Exhaust / supply air damper 0.5A

K. External Wiring Diagram 1

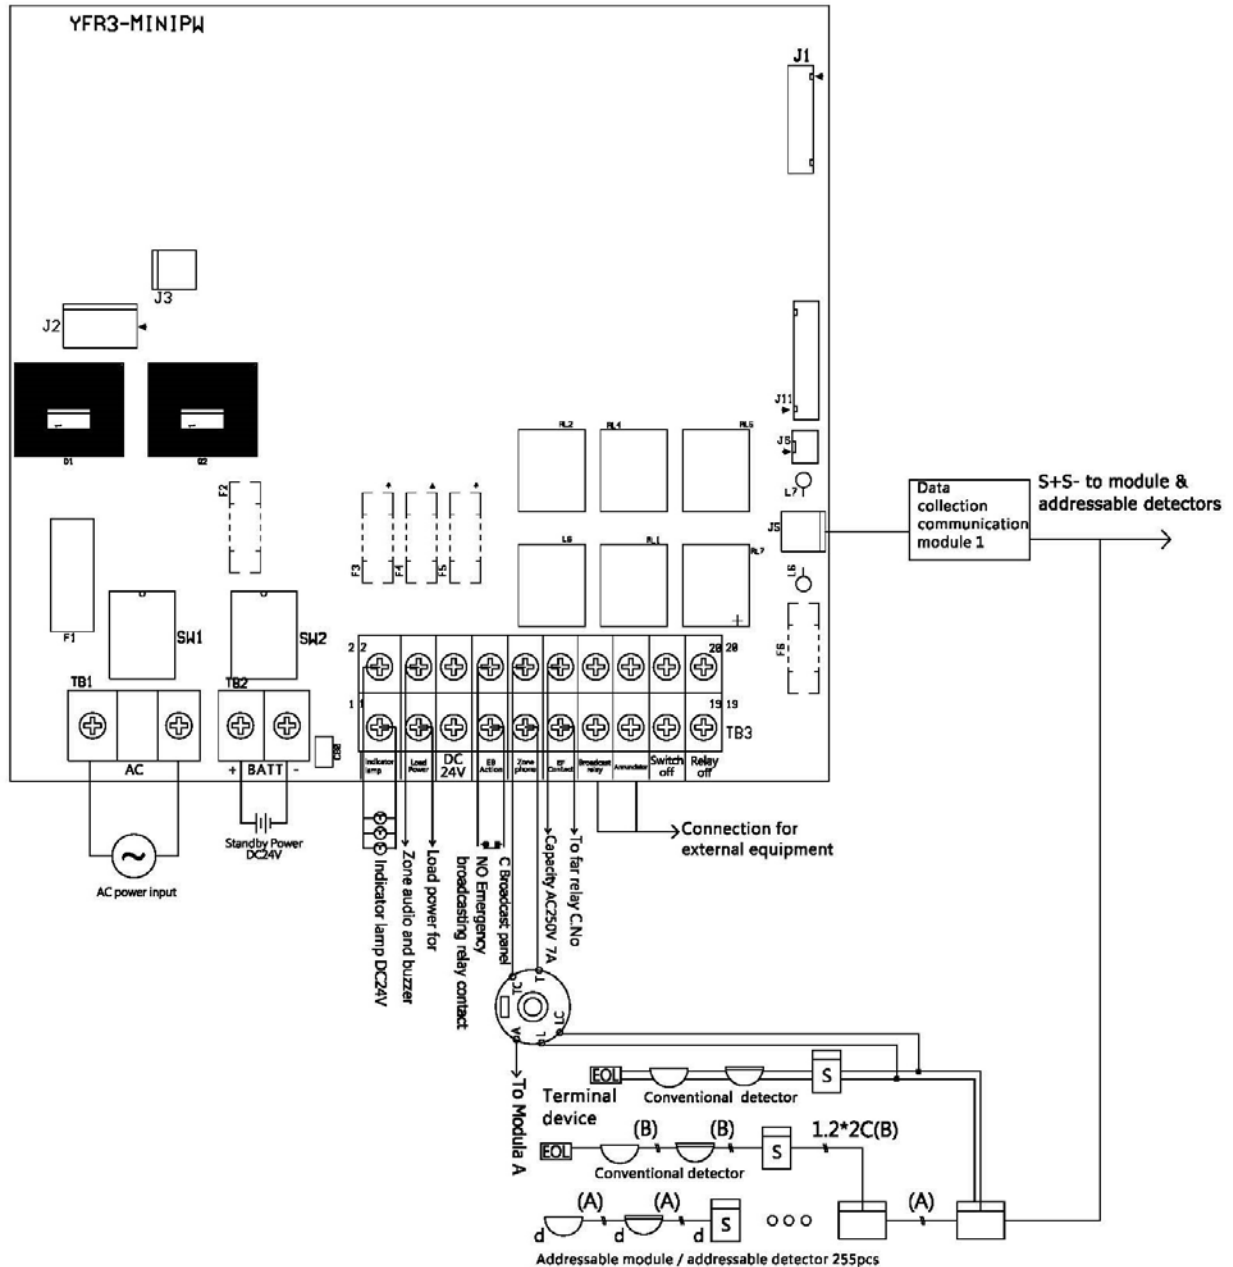

(NON SWITCH OFF/ AC POWER SWITCH RELAY)
 (A) 1.25mm²× 2c Aluminum shielded twisted pair cable
 (B) 1.20mm²× 2c

K. External Wiring Diagram 2

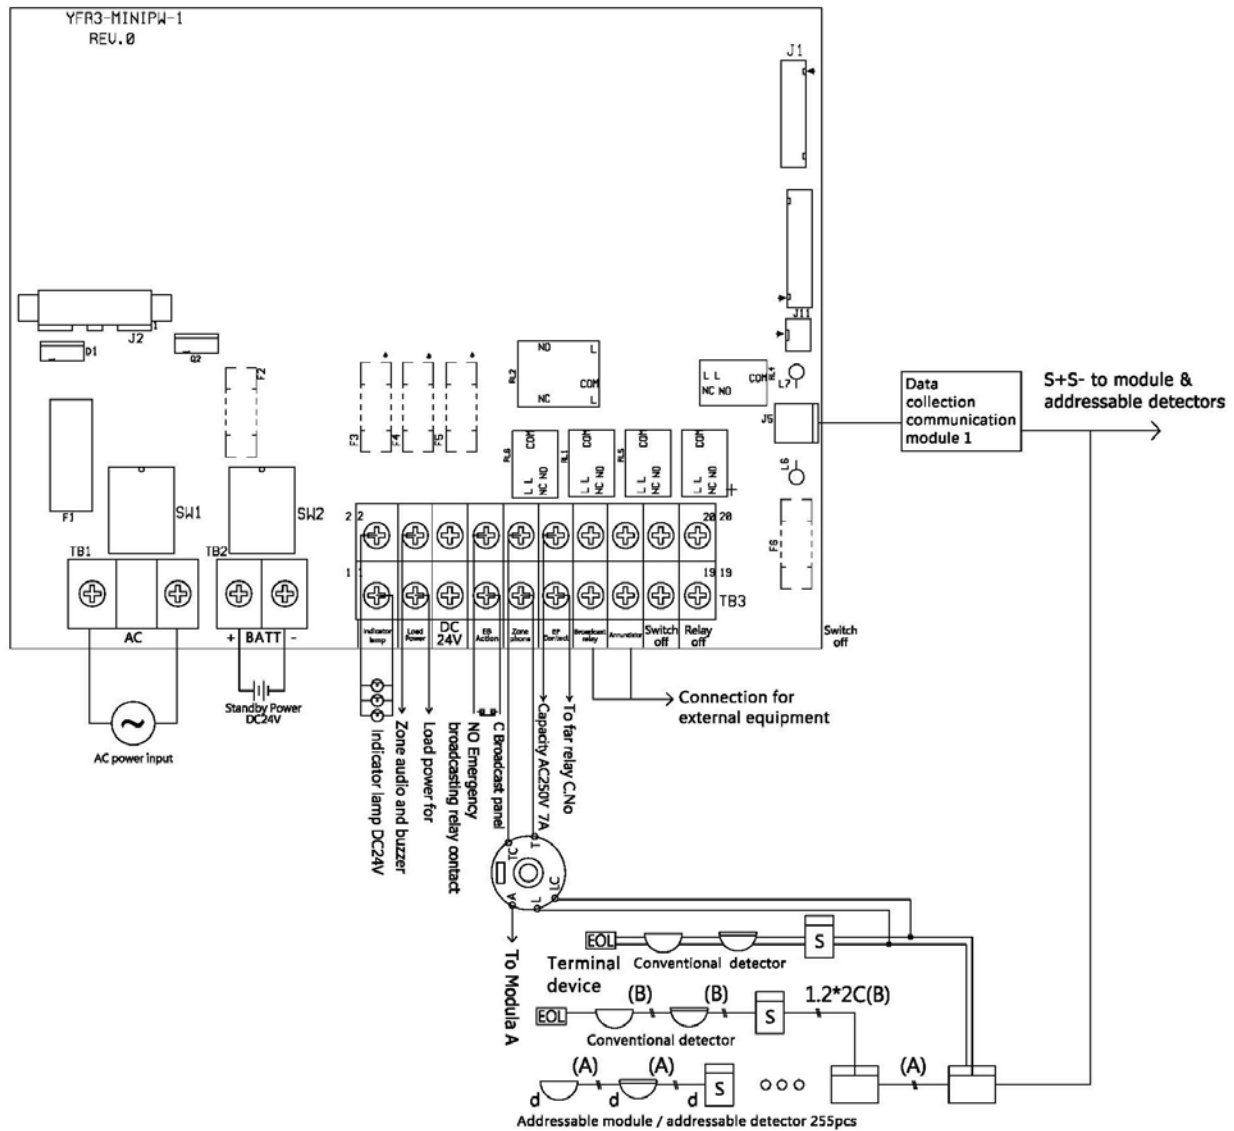

(SWITCH OFF/ AC POWER SWITCH RELAY)
(A) 1.25mm² × 2c Aluminum shielded twisted pair cable
(B) 1.20mm² × 2c

L. Structure Block Diagram

